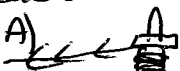



* Always make sure to start & end with the take-up lever in the highest position.


A = OLDER
B = NEWER.

Top threading

A 1) Extend the spool pin (usually the back one) and make sure that the thread is coming off the back side of the spool of thread. A)  B) 


B 1) Place the spool of thread on the spool pin & make sure the thread is coming off the bottom towards you.

A 2) Floss around the outside of the bobbin winder tension. It looks like a silver smarty.

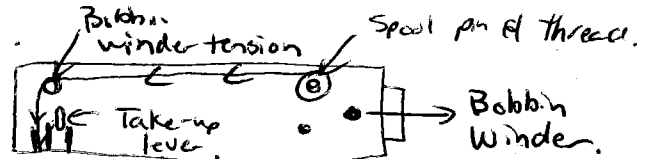

B 2) Floss into the bobbin winder tension, it is the silver bar across the width of the machine that has arrows coming out of it & an upside down "J".

After that make sure to go into the thread guide (the hook on the top).

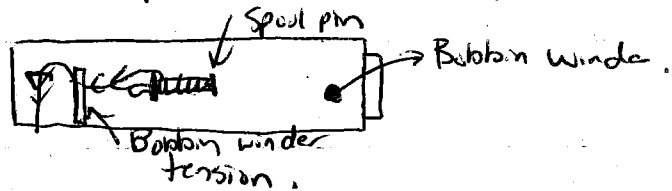


A&B 3) Go down the left side of the threading path & then come up the right side of it & be on the left side of the take-up lever.



A&B 4) Go around the back of the take-up lever to put the thread into the "eye of the bunny".

* Hint = use red thread for the demo & then it looks like the eyes are bleeding, the boys get a kick out of that.

A  Make the thread goes through the thread guide at bottom of the threading path.

front of the
AB 6) On the ^{front of the} needle holder with fixing screw it looks like a bucket, place the thread behind & slide it into place. It can go either on the (L) or (R). I prefer the (L).


AB 7) Thread the needle front to back - & make sure the excess is to the left & through the presser foot.

Bottom Same for both models.

1) Make a letter "P" with the bobbin being the circle part & the thread the like part.



2) Place the bobbin ^{case} over the bobbin

3)  Place the thread into the slit on the side not the big gap. Make sure it is all the way down into the bottom (aka ave).

4) Pull the thread to make sure it comes out easy & that it is moving counter clockwise.
If not coming out nicely, rethread or check the bobbin tape stuck to it or thread not in the right place.

5) Place it into the bed of the machine & make sure it clicks.

6) To get the thread from the bottom up, hold the top thread to the machine, turn the hand wheel one towards you then pull the top thread.
The machine is fully threaded for you.